

MIDI Data Table

Bank Select

Available Bank Select/Program Change

MSB (HEX)	LSB (HEX)	Program No.	Type	Memory	Description
0	00	0	0 - 127	Normal Voice	GM Voice
127	7F	0	0	Drum Voice	GM Drum
63	3F	0	0 - 127	Normal Voice	Preset 1
		1	01		Preset 2
		2	02		Preset 3
		3	03		Preset 4
		4	04		Preset 5
		5	05		Preset 6
		8	08		User 1
		9	09		User 2
		32	20	0 - 63	Drum Voice
		40	28	0 - 31	User
		50	32	0 - 127	Sample Voice
		60	3C	0 - 15	Mixing Voice
		24	18	0 - 63	Plug-in Voice
		25	19	0 - 63	User 1 (Slot1)
		26	1A	0 - 63	User 2 (Slot2)
		70	46	0 - 63	User 3 (Slot3)
				Preset 1 (Slot1)	Can be selected when the Plug-in board has been installed to slot 1.
				Preset 2 (Slot1)	
				Preset 3 (Slot1)	
				Preset 1 (Slot2)	Can be selected when the Plug-in board has been installed to slot 2.
				Preset 2 (Slot2)	
				Preset 3 (Slot2)	
				Preset 1 (Slot3)	Can be selected when the Plug-in board has been installed to slot 3.
				Preset 2 (Slot3)	
				Preset 3 (Slot3)	
Depending on the installed Plug-in Board.			Plug-in Direct	-	
63	3F	64	40	0 - 127	Performance
				User (Internal)	

When only the Program Change is received after entering any of the mode, the corresponding voice in the currently selected Type/Memory is called up.

The Master number and the Performance/Song/Pattern/Voice mode can be changed only via the Parameter Change.

The Song/Pattern can be changed only via the Song Select (Song: F3, 00-F3, 3F/Pattern: F3, 00-F3, 3F).

In the Performance mode, the Part Voice cannot be changed via the Program Change.

Parameter Base Address

Parameter Block	Top Address			Description
	H	M	L	
SYSTEM	00	00	00	System
	00	10	00	Plug-in Board Native System
	00	20	00	Master EQ for Voice
	00	21	00	Master Effect for Voice
	00	22	00	Master Effect Knob Setting
	0A	00	00	Mode Change
MODE CHANGE	0E	00	00	Header
BULK CONTROL	0F	00	00	Footer
MULTIPLE BULK CONTROL	10	00	00	Header
	11	00	00	Footer
MASTER KEYBOARD	33	00	00	Common
	32	00	00	Zone1
	32	03	00	Zone4
PERFORMANCE COMMON	30	00	00	Performance Common
PERFORMANCE PART	31	00	00	Part1
				:
	31	03	00	Part4
	31	60	00	Plug-in 1 Part
	31	61	00	Plug-in 2 Part
	31	62	00	Plug-in 3 Part
	34	40	00	AD Part1
				:
	34	44	00	AD Part5
				:
NORMAL VOICE COMMON	40	00	00	Common1
	40	00	40	Common2
	40	01	00	Reverb
	40	02	00	Chorus
	40	03	00	Insertion A
	40	04	00	Insertion B
	40	05	00	Controller
	40	06	00	LFO
	40	70	00	Extra
				:
NORMAL VOICE ELEMENT GROUP 1	41	ee	00	ee: Element No.
NORMAL VOICE ELEMENT GROUP 2	42	ee	00	ee: Element No.
NORMAL VOICE ELEMENT GROUP 3	43	ee	00	ee: Element No.
NORMAL VOICE ELEMENT GROUP 4	44	ee	00	ee: Element No.
DRUM COMMON	46	00	00	Common1
	46	00	40	Common2
	46	01	00	Reverb
	46	02	00	Chorus
	46	03	00	Insertion A
	46	04	00	Insertion B
	46	05	00	Controller
	46	70	00	Extra
				:
				:
DRUM ELEMENT GROUP 1	47	ee	00	ee: Element No.
DRUM ELEMENT GROUP 2	48	ee	00	ee: Element No.
DRUM ELEMENT GROUP 3	49	ee	00	ee: Element No.
DRUM ELEMENT GROUP 4	4A	ee	00	ee: Element No.
VOICE PLUG-IN	4C	00	00	Common
	4C	01	00	Reverb
	4C	02	00	Chorus
	4C	03	00	Insertion A
	4C	04	00	Insertion B
	4C	05	00	Controller
	4C	10	00	Plug-in XG Part
	4C	20	00	Native
	4C	70	00	Extra
				:
Mix for Song/Pattern	36	00	00	Multi Common
	37	00	00	Part1
				:
	37	0F	00	Part16
	37	60	00	Plug-in 1 Part
	37	61	00	Plug-in 2 Part
	37	62	00	Plug-in 3 Part
	38	40	00	AD Part1
				:
	38	44	00	AD Part5