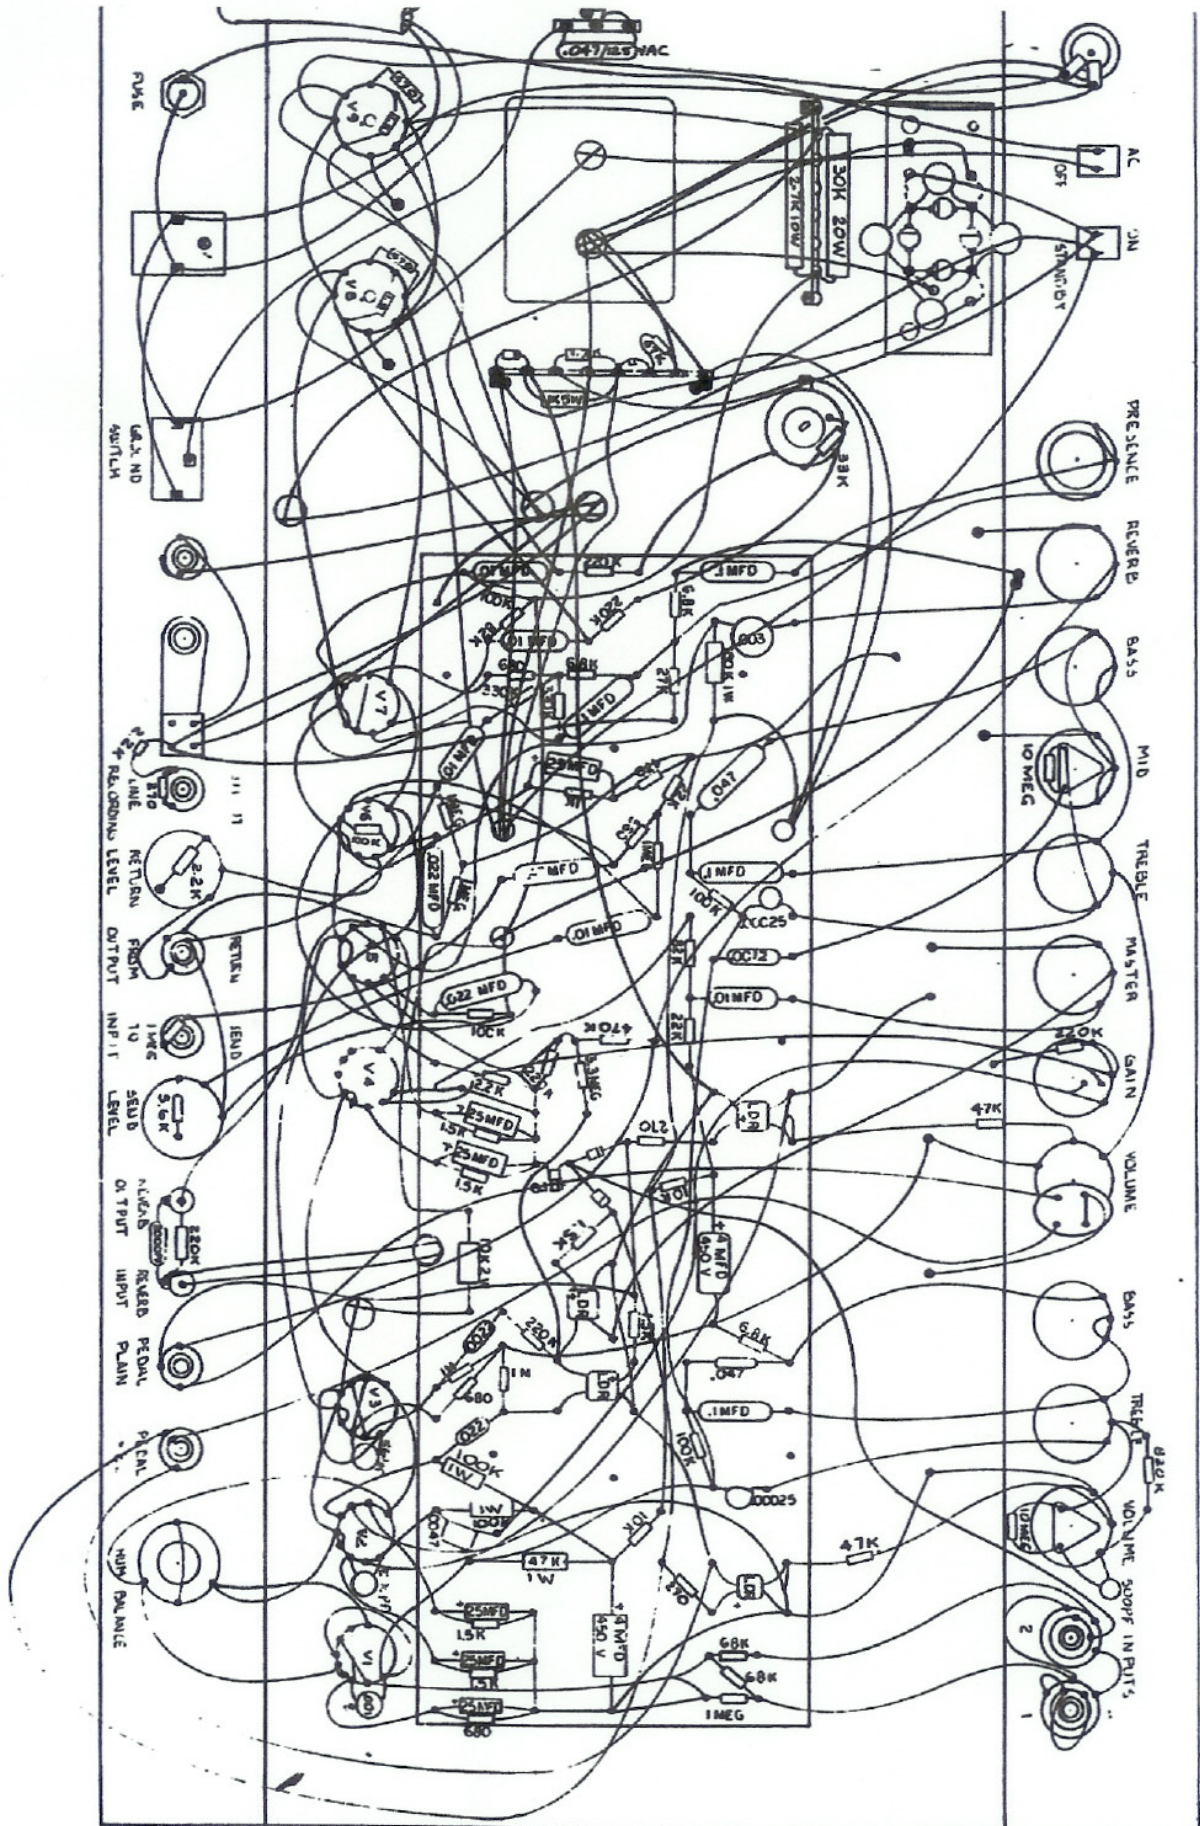


[illegible]

FENDER CONCERT 1-12", 2-10" and 4-10" AMPLIFIERS (214800, 214801, 214803, 214804 and 214805) PARTS LIST

CONCERT 1-12"

019288 Cabinet w/hdw.
019540 Grill Frame w/hdw.
005379 12" Speaker
010129 12" EV Speaker

CONCERT 2-10"

019390 Cabinet w/hdw.
019540 Grill Frame w/hdw.
064121 10" Speaker
019376 10" EV Speaker

CONCERT 4-10"

019614 Cabinet w/hdw.
019616 Grill Frame w/hdw.
064121 10" Speaker
019552 Upper Cabinet Back
019553 Lower Cabinet Back
019170 Handle w/insert
019279 Handle Cap
019308 Glide Assy.
024695 Corner (two-screw)
019585 Tolex (black)
018252 Grill Cloth
018302 Power Transformer
018343 Output transformer
022921 Reverb Output Transformer
022707 Choke
011298 Fender Logo
013341 7025/12AX8A tube
023531 12AT7 Tube
023556 6L6 Tube
064063 Reverb Pan
031849 Reverb Pan Bag
032714 Reverb Cable 50"
033282 Reverb Cable 36"

CAPACITORS

010541 .0022 mfd 10% 600V
010992 560 pf 10% 3KV
014700 .047 mfd 125V
023257 .002 10% 25F
001485 .47 mfd 200V
004513 .022 mfd 10% 600V
008159 .1 mfd 20% 600V
009512 25 mfd 25V
010542 .0047 mfd 10% 600V
010543 .01 mfd 10% 600V
012022 4 mfd 450V
012754 .047 mfd ±10% 600V
017497 .1 uf 63V
020875 .003 mfd 10% 1KV
020883 .00001 mfd 1KV
020917 .00025 mfd 10% 1KV
021022 .1 mfd 200V
020842 .0005 mfd 10% 1KV
020925 120 pf 10% 1KV
013638 220 mfd 285V
014122 70 mfd 100V
020982 20 mfd 500V
060962 .001 mfd 10%

RESISTORS

006138 33K ohm 10% 1/2w
006167 100K 10% 1w
012389 47K -10% 1w
017516 10K 2w
021188 470 ohm 10% 1/2w
021204 1K ohm 10% 1/2w
021212 1.5K ohm 10% 1/2w
021220 2.2K ohm 10% 1/2w
021253 6.8K ohm 10% 1/2w
021279 10K ohm 10% 1/2w
021295 22K ohm 10% 1/2w
021303 27K ohm 10% 1/2w

021311 47K ohm 10% 1/2w
021337 68K ohm 10% 1/2w
021345 100K ohm 10% 1/2w
021352 470K ohm 10% 1/2w
021360 1 meg ohm 10% 1/2w
021386 3.3 meg ohm 10% 1/2w
021493 220K ohm 10% 1/2w
032136 82K ohm 10% 1/2w
070110 560 ohm 10% 1/2w
070128 680 ohm 10% 1/2w
090456 320K ohm 10% 1/2w
021394 1.0 meg ohm 10% 1/2w
065847 820K ohm 10% 1/2w
021261 8.2K ohm 10% 1/2w
019940 1K 10% 5w
021182 47 ohm 10% 1/2w
070144 3.9K ohm 10% 1/2w
013764 2.7K 10% 10w
018765 30K 10% 20w
008223 2.2K 10% 1W
021451 220K ohm 10% 1w
085771 120K ohm 10% 1/2w
021402 470 ohm 10% 1w
073502 270 ohm 10% 1/2w

DIODES

026730 1A 800v
006260 Low Leakage
013556 VacTec Led/Ldr
015003 EN5234B

CONTROLS

028421 100 ohm (Hum Balance)
010437 10K 20% (output tube matching)
013608 1 meg w/switch (volume, input)
019270 10K audio 20% w/pull switch (mid)
019650 1 mj 20% w/spdt switch (volume, channel select)
021857 250K audio (treble, bass, master, return level, send level)
021865 3 meg reverse audio (gain)
021873 100K (reverb)
021923 25K (presence)

SCREWS

011231 Cabinet back Mounting
019277 Speaker Mounting
022180 Glide Mounting
022103 Corner Mounting
022244 Handle Mounting
022152 Logo Mounting
022226 Chassis Mounting

WASHERS

010823 Dress (pilot light)
014567 Red Enamel (pedal jack)
031153 Finish (jack's)
016436 Internal Lock (Controls & Jacks)
016469 Internal Lock (Fuse Holder)
022384 Internal Lock (reverb input jack)
022293 Dress (switches)

NUTS

021972 Tee Nut (handle mounting)
016352 Control & Jack mounting
019282 Pem (chassis)
022012 Switch Mounting
031625 Pilot Light Holder Mounting
031666 Fuse Holder Mounting
092494 Speaker Mounting

MISCELLANEOUS

013485 Knob (treble, bass, gain, master, reverb, presence)
014521 Knob (return level and send level)
024604 Knob (volume & mid)
019595 Control Plate
019602 Rear Chassis Plate
010766 Line Cord
007565 Strain Relief Bushing (line cord)
022491 Cable clamp (AC cord & reverb cables)
013171 Jack (Pedal Flair)
014143 Jack (extension speaker)
019809 Jack (effects return)
019864 Jack (Inputs)
021824 Jack (Reverb Out & In)
021956 Jack (line recording & effects send)
023760 Jack (pedal red)
068270 Jack (Speaker)
021527 Fuse Holder
021717 2-1/2 A Fuse
021741 Pilot light holder
021642 #47 pilot light
032219 Pilot light collar
025718 Pilot Light Jewel
023580 Tube socket (8-pin)
023606 Tube Socket (9-pin)
025866 Tube ring
023598 Tube shield
010023 Toggle Switch spdt (ground)
037960 Toggle Switch spdt (on-off & standby)
024752 Chassis Strap

EXPORT MODEL ONLY

013002 AC cord
016520 Voltage Selector
018303 Power Transformer
019603 Rear chassis plate
026559 3A fuse (slo-blo)
061663 Toggle Switch dpst

Specifications Subject to Change Without Notice