

MIDI Data List Roland DP-10 Switch Mode

0,05:59:22.366,out,Controller Hold Pedal (on/off): 10,1,10,B0 40 0A
1,05:59:22.369,out,Controller Hold Pedal (on/off): 29,1,29,B0 40 1D
2,05:59:22.372,out,Controller Hold Pedal (on/off): 46,1,46,B0 40 2E
3,05:59:22.375,out,Controller Hold Pedal (on/off): 61,1,61,B0 40 3D
4,05:59:22.377,out,Controller Hold Pedal (on/off): 73,1,73,B0 40 49
5,05:59:22.381,out,Controller Hold Pedal (on/off): 84,1,84,B0 40 54
6,05:59:22.384,out,Controller Hold Pedal (on/off): 93,1,93,B0 40 5D
7,05:59:22.386,out,Controller Hold Pedal (on/off): 101,1,101,B0 40 65
8,05:59:22.390,out,Controller Hold Pedal (on/off): 108,1,108,B0 40 6C
9,05:59:22.393,out,Controller Hold Pedal (on/off): 113,1,113,B0 40 71
10,05:59:22.396,out,Controller Hold Pedal (on/off): 118,1,118,B0 40 76
11,05:59:22.399,out,Controller Hold Pedal (on/off): 122,1,122,B0 40 7A
12,05:59:22.401,out,Controller Hold Pedal (on/off): 127,1,127,B0 40 7F
13,05:59:22.978,out,Controller Hold Pedal (on/off): 85,1,85,B0 40 55
14,05:59:22.981,out,Controller Hold Pedal (on/off): 0,1,0,B0 40 00

MIDI Data List Roland DP-10 Continuous Mode

0,05:54:02.332,out,Controller Hold Pedal (on/off): 2,1,2,B0 40 02
1,05:54:02.335,out,Controller Hold Pedal (on/off): 5,1,5,B0 40 05
2,05:54:02.338,out,Controller Hold Pedal (on/off): 7,1,7,B0 40 07
3,05:54:02.341,out,Controller Hold Pedal (on/off): 10,1,10,B0 40 0A
4,05:54:02.344,out,Controller Hold Pedal (on/off): 12,1,12,B0 40 0C
5,05:54:02.347,out,Controller Hold Pedal (on/off): 14,1,14,B0 40 0E
6,05:54:02.351,out,Controller Hold Pedal (on/off): 17,1,17,B0 40 11
7,05:54:02.353,out,Controller Hold Pedal (on/off): 19,1,19,B0 40 13
8,05:54:02.356,out,Controller Hold Pedal (on/off): 21,1,21,B0 40 15
9,05:54:02.359,out,Controller Hold Pedal (on/off): 23,1,23,B0 40 17
10,05:54:02.362,out,Controller Hold Pedal (on/off): 27,1,27,B0 40 1B
11,05:54:02.365,out,Controller Hold Pedal (on/off): 30,1,30,B0 40 1E
12,05:54:02.368,out,Controller Hold Pedal (on/off): 33,1,33,B0 40 21
13,05:54:02.371,out,Controller Hold Pedal (on/off): 36,1,36,B0 40 24
14,05:54:02.374,out,Controller Hold Pedal (on/off): 44,1,44,B0 40 2C
15,05:54:02.377,out,Controller Hold Pedal (on/off): 46,1,46,B0 40 2E
16,05:54:02.380,out,Controller Hold Pedal (on/off): 49,1,49,B0 40 31
17,05:54:02.383,out,Controller Hold Pedal (on/off): 52,1,52,B0 40 34
18,05:54:02.386,out,Controller Hold Pedal (on/off): 56,1,56,B0 40 38
19,05:54:02.389,out,Controller Hold Pedal (on/off): 61,1,61,B0 40 3D
20,05:54:02.392,out,Controller Hold Pedal (on/off): 65,1,65,B0 40 41
21,05:54:02.395,out,Controller Hold Pedal (on/off): 70,1,70,B0 40 46
22,05:54:02.398,out,Controller Hold Pedal (on/off): 75,1,75,B0 40 4B
23,05:54:02.401,out,Controller Hold Pedal (on/off): 80,1,80,B0 40 50
24,05:54:02.404,out,Controller Hold Pedal (on/off): 84,1,84,B0 40 54
25,05:54:02.407,out,Controller Hold Pedal (on/off): 89,1,89,B0 40 59
26,05:54:02.410,out,Controller Hold Pedal (on/off): 93,1,93,B0 40 5D
27,05:54:02.413,out,Controller Hold Pedal (on/off): 98,1,98,B0 40 62
28,05:54:02.416,out,Controller Hold Pedal (on/off): 102,1,102,B0 40 66
29,05:54:02.419,out,Controller Hold Pedal (on/off): 108,1,108,B0 40 6C
30,05:54:02.422,out,Controller Hold Pedal (on/off): 112,1,112,B0 40 70
31,05:54:02.425,out,Controller Hold Pedal (on/off): 118,1,118,B0 40 76
32,05:54:02.428,out,Controller Hold Pedal (on/off): 121,1,121,B0 40 79
33,05:54:02.431,out,Controller Hold Pedal (on/off): 127,1,127,B0 40 7F

34,05:54:03.184,out,Controller Hold Pedal (on/off): 125,1,125,B0 40 7D
35,05:54:03.187,out,Controller Hold Pedal (on/off): 121,1,121,B0 40 79
36,05:54:03.190,out,Controller Hold Pedal (on/off): 116,1,116,B0 40 74
37,05:54:03.193,out,Controller Hold Pedal (on/off): 112,1,112,B0 40 70
38,05:54:03.196,out,Controller Hold Pedal (on/off): 108,1,108,B0 40 6C
39,05:54:03.199,out,Controller Hold Pedal (on/off): 104,1,104,B0 40 68
40,05:54:03.202,out,Controller Hold Pedal (on/off): 100,1,100,B0 40 64
41,05:54:03.205,out,Controller Hold Pedal (on/off): 95,1,95,B0 40 5F
42,05:54:03.208,out,Controller Hold Pedal (on/off): 91,1,91,B0 40 5B
43,05:54:03.211,out,Controller Hold Pedal (on/off): 85,1,85,B0 40 55
44,05:54:03.214,out,Controller Hold Pedal (on/off): 80,1,80,B0 40 50
45,05:54:03.217,out,Controller Hold Pedal (on/off): 73,1,73,B0 40 49
46,05:54:03.220,out,Controller Hold Pedal (on/off): 66,1,66,B0 40 42
47,05:54:03.223,out,Controller Hold Pedal (on/off): 59,1,59,B0 40 3B
48,05:54:03.226,out,Controller Hold Pedal (on/off): 52,1,52,B0 40 34
49,05:54:03.229,out,Controller Hold Pedal (on/off): 44,1,44,B0 40 2C
50,05:54:03.232,out,Controller Hold Pedal (on/off): 36,1,36,B0 40 24
51,05:54:03.235,out,Controller Hold Pedal (on/off): 29,1,29,B0 40 1D
52,05:54:03.238,out,Controller Hold Pedal (on/off): 21,1,21,B0 40 15
53,05:54:03.241,out,Controller Hold Pedal (on/off): 14,1,14,B0 40 0E
54,05:54:03.244,out,Controller Hold Pedal (on/off): 6,1,6,B0 40 06
55,05:54:03.247,out,Controller Hold Pedal (on/off): 0,1,0,B0 40 00