


## 9. Pedal keyboard disassembly


- 9-1) Turn off the power and place the unit on its side carefully.
  - 9-2) Remove the protective rail by removing 4 screws **A** (4 x 10 bind head screws). (Fig. 12)
  - 9-3) Remove the pedal keyboard unit by removing 5 screws **B** (4 x 20 bind head screws) and disconnecting the connector. (Fig. 12)
  - 9-4) Remove the keyboard by removing the screw **C** (4 x 10 stepped screw) while holding the hexagonal nut stationary. (Fig. 13)
- \*After reinstalling the keyboard, be sure to apply the screw lock to the hexagonal nut.

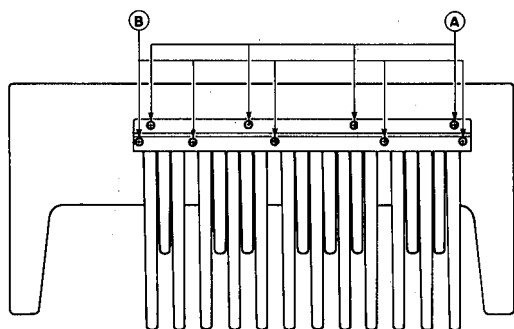

(Fig. 12)

## 9. ペダル鍵盤の分解

- 9-1 電源を切り、製品を静かに横にします。
  - 9-2 ネジ**A**(バインド小ネジ 4 x 10) 4 本を外し、保護レールを外します。(Fig.12)
  - 9-3 ネジ**B**(バインド小ネジ 4 x 20) 5 本を外し、コネクタを抜いて、ペダル鍵盤ユニットを取り外します。(Fig. 12)
  - 9-4 六角ナットを固定しながら、ネジ**C**(段付きネジ 4 x 40)を外し、鍵盤を外します。(Fig.13)
- ※鍵盤を取り付けた後は、必ず六角ナット側にネジロックをして下さい。

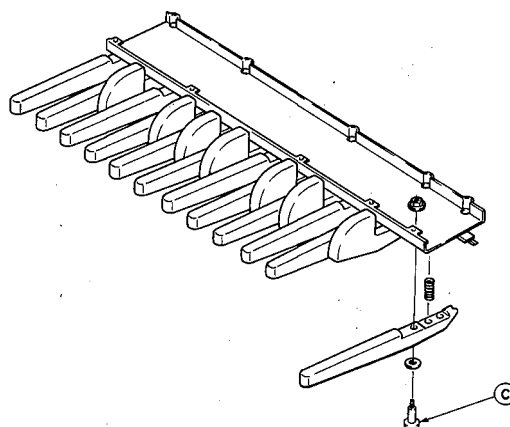


(Fig. 13)

## 10. EXP pedal (EP-10) removal

Remove the EP-10 fixing screw **A** (4 x 14 bind head screw), pull the EP-10 forward and disconnect the connector in the holder, then it can be removed. (Fig. 14)

## 10. EXPペダル(EP-10)の外し方

EP-10の取付ネジ**A**(バインド小ネジ 4 x 14) 1 本を外し、EP-10を手前に引き、ホルダー内のコネクタを外し、取り外します。(Fig.14)

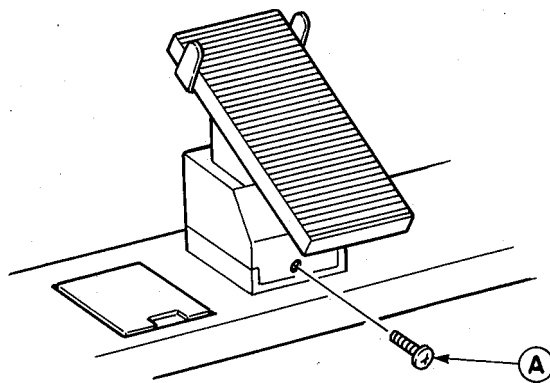

(Fig. 14)