


INSTALLING STEINBERGER STRING ADAPTERS



Loosen the tuning machine and insert ball end. Close machine just enough to where ball end will not come out of machine. (FIGURE 1).

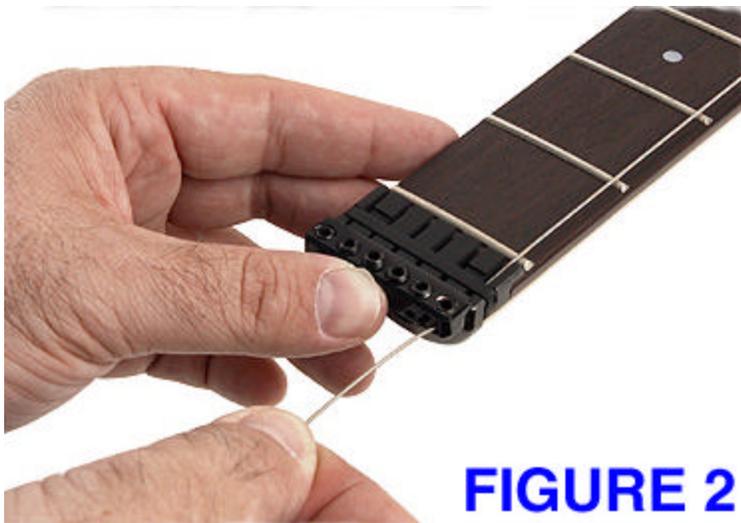

Pull non ball end of string through the nut and through the appropriate hole in the adapter. (FIGURE 2)

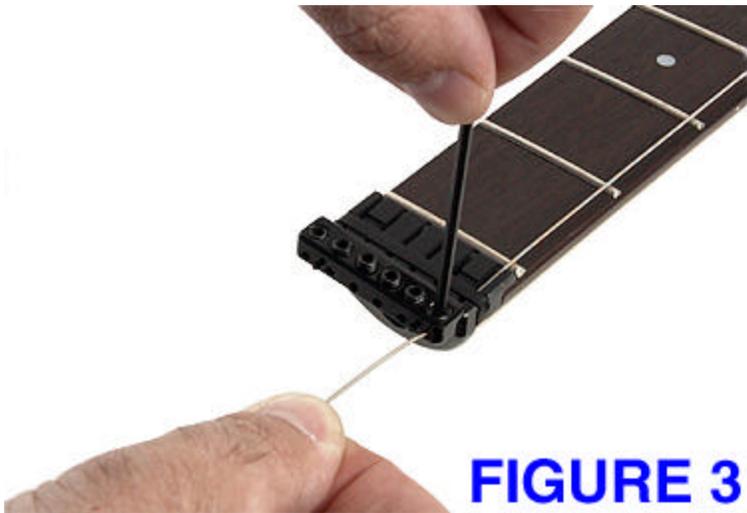


FIGURE 3

While keeping the string pulled tight and the adapter as close to the nut as possible, tighten the allen screw with the supplied allen wrench. (FIGURE 3)



FIGURE 4

Follow the same procedures for each string and when you are finished it should look like this. (FIGURE 4)

Tune guitar or bass normally and play.