


Fender® Mustang™ III-V (V.2) Audio Signal Path: Effects Loop Position



Effects Loop Position: "Looper Pedal" (Headphones Connected)

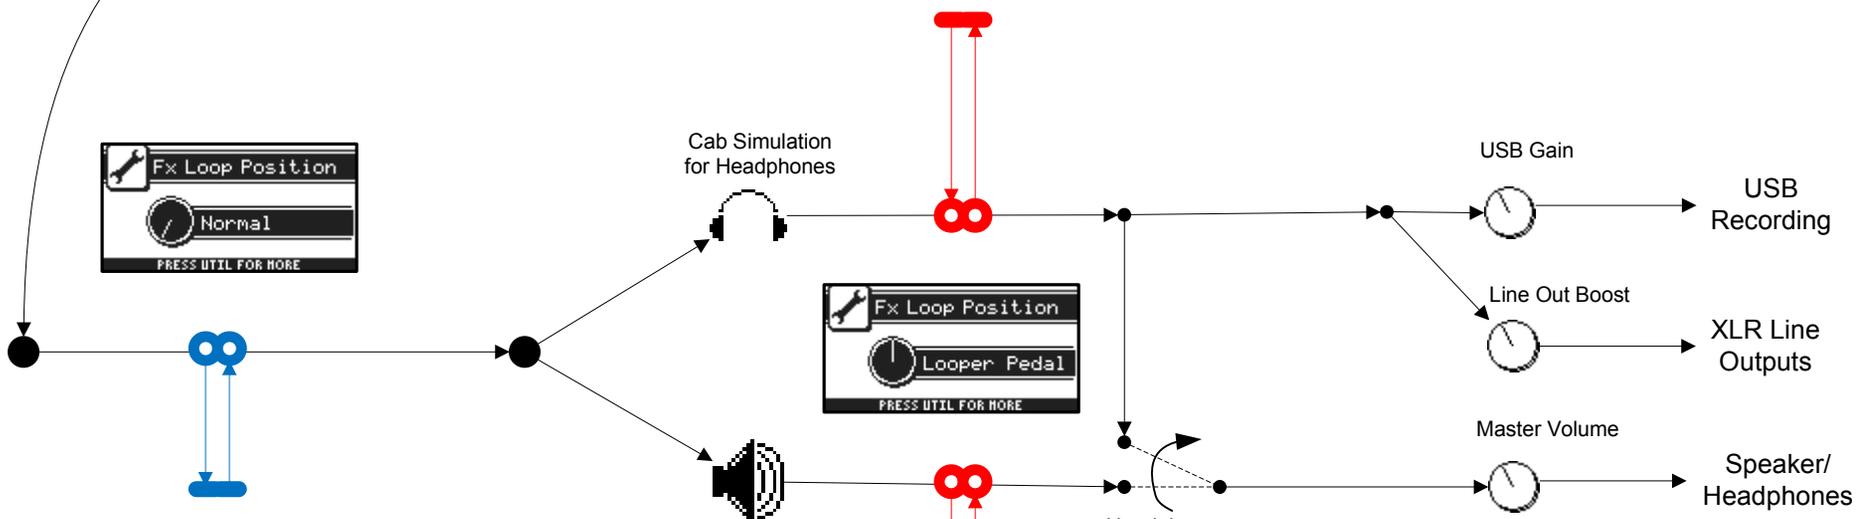

Effects Loop Position: "Normal"

Press the Utility button 8 times to access the Fx Loop Position menu item. "Normal" mode is best for typical usage: rack mounted delays reverbs, multi-effects, etc. Not ideal for using a looper pedal because cab simulation can change when switching presets. A looper pedal can be used here without problems if the preset doesn't change, or if presets are chosen that have the same cab simulation setting.

Effects Loop Position: "Looper Pedal" (Headphones Disconnected)

Effects Loop Position: "Looper Pedal"

Press the Utility button 8 times to access the Fx Loop Position menu item. "Looper Pedal" mode is best for usage with looper pedals and phrase samplers. Looper playback tonality will not be affected with preset change. Actual internal insertion point changes based on whether or not the headphones are inserted. Note that the looper pedal signal will appear in the Line Outs and USB Recording path only when the headphones are connected.